



 




 

 
 










 






 




 
 
 

 
 
 
 
 
 


 









 



 










Original	Sustituto	Original	Sustituto
 Power	 Power	 Contents	 Smart
 Open / Close	 Exit	 Source	 AV
 Display	 Info	 TV / Mode	 TV/R
 Setup	 Options	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 Enter	 Ok
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 Top Menu	 D. Menu
 6	 6	 Menu	 Menu
 7	 7	 Stop	 Stop
 8	 8	 Play	 Play
 9	 9	 II>	 Pause
 0	 0	 I<<	 I<<
 CH+	 Ch +	 >>I	 >>I
 CH-	 Ch -	 <<	 <<
 Guider	 Guide	 >>	 >>

Original	Sustituto	Original	Sustituto
 Power	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 >>I	
 Play	 II>	 I<<	
 >>I	 I<<	 SETTINGS	
 I<<	 OPT	 DUAL	 SUBT
 DUAL	 SUBT	 PICTURE	 ECO
 PICTURE	 ECO	 SLEEP	 3D
 SLEEP	 3D	 E-MANUAL	 TIMER
 E-MANUAL	 TIMER	 D.MENU	 AV
 D.MENU	 AV	 TOP MENU	 INFO
 TOP MENU	 INFO	 OK	
 OK		 CLEAR	 RETURN
 CLEAR	 BACK	 EXIT	
 EXIT		 HOME	 SMART
 HOME	 SMART	 APP	 CH+
 APP	 CH+	 MEDIA	 CH-
 MEDIA	 CH-	 1	 2
 1	 3	 3	 4
 3	 4	 5	 6
 5	 6	 7	 8
 7	 8	 9	 9
 9	 9	 FAV	 PRE-CH
 FAV	 PRE-CH	 GUIDE	 A
 GUIDE	 A	 0	 B
 0	 C	 A	 C
 A	 B	 D	 D
 D			



