 
 











 









 














Original	Sustituto
 On/Stand-by	 Power
 MP3 Display	 Media
 Clock	 List
 Sleep	 Sleep
 Timer	 AV
 Surround	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide

Original	Sustituto
 <</Tuning	 <<
 >>/Tuning Up	 >>
 <</Preset	 <<
 >> /Preset Up	 >>
 Pause	 Pause
 Play	 Play
 Stop	 Stop
 Rec Pause	 Rec
 Vol+	 Vol +
 Vol-	 Vol -
 PTY-TI	 Options
 ASPM	 Subt
 Display	 Info
 Bass+	 Ch +
 Bass-	 Ch -
 Treble+	 Right
 Treble-	 Left





	Original	Sustituto		Sustituto
MEMORY	Memory	SEARCH TV/R	TV/R	
CLEAR	Clear	CLEAR EXIT	Exit	
REPEAT	Repeat	REPEAT TEXT	Text	
RANDOM	Random	HOME SMART	Smart	
C D	CD	D	Blue	
TUNER(BAND)	Tuner(Band)	B	Green	
TAPE	Tape	C	Yellow	
VIDEO/AUX	Video/AUX	A	Red	

	Original	Sustituto

