



























 








Original	Sustituto	Sustituto
Power		Power
Recall		Back / Return
CC		Subtitle / EQ
Text		Text / Goto
Smart		Smart / List
Sleep		Sleep / Timer
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Reset		Exit / Cancel / Clear

Original	Sustituto	Sustituto
CH / Guide		Guide / EPG / -/--
Up		Up
M		Menu / Home
A / CH		Info / Angle
Down		Down
Vol+		Vol+
Vol-		Vol-
Left / -		Left
Right / +		Right
Mute		Mute / Dimmer
CH+		CH+ / Page+
CH-		CH- / Page-
A		Red / Netflix / Search
B		Green / APP / Repeat
C		Yellow / YouTube / Repeat
D		Blue / Prime Video / Random
G		Shift + Yellow / YouTube / Repeat


































 
 




Original	Sustituto	Original	Sustituto
Clock	 +  Shift + Sleep / Timer		
E	 +  Shift + Red / Netflix /		
F	 +  Shift + Green / APP /		
A / V	 AV / Input / RDS		





Original	Sustituto	Original	Sustituto
Power	 Power	Up	 Up
Recall	 Back / Return	CH / Guide	 Guide / EPG / -/-
CC	 Subtitle / EQ	Down	 Down
Text	 Text / Goto	M	 Menu / Home
Smart	 Smart / List	Vol+	 Vol+
Sleep	 Sleep / Timer	A / CH	 Info / Angle
1	 1	Vol-	 Vol-
2	 2	Mute	 Mute / Dimmer
3	 3	Left / -	 Left
4	 4	Right / +	 Right
5	 5	CH+	 CH+ / Page+
6	 6	CH-	 CH- / Page-
7	 7	A	 Red / Netflix / Search
8	 8	B	 Green / APP / Repeat
9	 9	C	 Yellow / YouTube / Repeat
0	 0	D	 Blue / Prime Video / Random
Reset	 Exit / Cancel / Clear	Clock	 +  Shift + Sleep / Timer
































































 





 


Original	Sustituto	Original	Sustituto
E	 Shift + Red / Netflix /		
F	 Shift + Green / APP /		
G	 Shift + Yellow / YouTube /		
A / V	 AV / Input / RDS		





Original	Sustituto	Original	Sustituto
Power	 Power	CH / Guide	 Guide / EPG / -/--
Recall	 Back / Return	Up	 Up
CC	 Subtitle / EQ	Down	 Down
Text	 Text / Goto	A / CH	 Info / Angle
Smart	 Smart / List	M	 Menu / Home
Sleep	 Sleep / Timer	Right / +	 Right
1	 1	Left / -	 Left
2	 2	Vol+	 Vol+
3	 3	Vol-	 Vol-
4	 4	Mute	 Mute / Dimmer
5	 5	CH+	 CH+ / Page+
6	 6	CH-	 CH- / Page-
7	 7	A	 Red / Netflix / Search
8	 8	B	 Green / APP / Repeat
9	 9	C	 Yellow / YouTube / Repeat
0	 0	D	 Blue / Prime Video / Random
Reset	 Exit / Cancel / Clear	E	 Shift + Red / Netflix / Search

Original	Sustituto	Original	Sustituto
Power	 Power	CH / Guide	 Guide / EPG / -/--
Recall	 Back / Return	Up	 Up
CC	 Subtitle / EQ	Down	 Down
Text	 Text / Goto	A / CH	 Info / Angle
Smart	 Smart / List	M	 Menu / Home
Sleep	 Sleep / Timer	Right / +	 Right
1	 1	Left / -	 Left
2	 2	Vol+	 Vol+
3	 3	Vol-	 Vol-
4	 4	Mute	 Mute / Dimmer
5	 5	CH+	 CH+ / Page+
6	 6	CH-	 CH- / Page-
7	 7	A	 Red / Netflix / Search
8	 8	B	 Green / APP / Repeat
9	 9	C	 Yellow / YouTube / Repeat
0	 0	D	 Blue / Prime Video / Random
Reset	 Exit / Cancel / Clear	E	 Shift + Red / Netflix / Search



