

 
 







 







 

 



 



 



 


 
 



 



 
























 







 


 
 

 
 
 






Original	Sustituto	Original	Sustituto
	Power		Power
	USB		Media
	Power Tv	 + 	Shift + Power
	Video Sel		Smart
	HDMI Sel		AV
	Repeat		Text
	A-B Repeat	 + 	Shift + Text
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/I.Skip		0
	Bookmark		Guide
	Step		Options
	<<		<<
	I.Replay		3D
	Pause		Pause
	>>		>>
	I<<		I<<
	Stop		Stop
	Play		Play
	>>I		>>I
	Tv Vol+		Vol +
	Tv Vol-		Vol -
	Tv/Video		TV/R
	Tv CH+		Ch +
	Tv CH-		Ch -
	Menu		Menu





Original	Sustituto
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Disc Menu	 D. Menu
 EZ View	 Format
 Exit	 Exit
 Cancel	 Pre Ch
 Subtitle	 Subt
 Audio	 Dual
 Info	 Info
 Zoom	 Shift + Eject

Original	Sustituto

