 






 
 

 

 






Original	Sustituto
 Power	 Power
 Eco/Energy	 3D
 AV Mode	 Shift + AV
 Input	 AV
 Tv/Rad	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 List
 Q.View	 Eject

Original	Sustituto
 FAV/Mark/Char/Nu	 Pre Ch
 Ratio	 Format
 Mute/Delete	 Mute
 P+	 Ch +
 P-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Premium	 Smart
 Q.Menu	 D. Menu
 Home	 Menu
 Back	 Back
 Guide	 Guide
 Exit	 Exit
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right





Original		Sustituto		Original		Sustituto	
	Left		Left				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Text		Text				
	Subtitle		Subt				
	T.Opt		Options				
	Info		Info				
	APP/*		Media				
	AD		Shift + Subt				
	Simplink		Sleep				
	Stop		Stop				
	Play		Play				
	Pause		Pause				
	<<		<<				
	>>		>>				

