



Original	Sustituto
 Power	 Power
 Mute	 Mute
 V+	 Vol +
 V-	 Vol -
 AV	 AV
 P+	 Ch +
 P-	 Ch -
 Audio	 Dual
 Menu	 Menu
 Info	 Info
 Exit	 Exit
 Up / Channel+	 Up
 Down /	 Down
 Right / Vol+	 Right
 Left / Vol-	 Left
 OK	 Ok
 Red / RCL	 Red

Original	Sustituto
 Green / Pause	 Green
 Green / Pause	 Pause
 Yellow / SUB	 Yellow
 Yellow / SUB	 Subt
 Blue / Text	 Blue
 Blue / Text	 Text
 FAV	 Pre Ch
 TV/R	 TV/R
 EPG	 Guide
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8





Original		Sustituto	
9	9	9	9
0	0	0	0
VF	VF	APP MEDIA	Media
SYS	SYS	HOME SMART	Smart

Original		Sustituto	

