


















































Original	Sustituto	
AVR Power On		Power
Mute		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
<<		<< / Tune-
>>		>> / Tune+
I<<		I<< / Preset-
>>I		>>I / Preset+
Audio Effects		Audio / Lang I/II
Surround Modes		Eject / Surround
Video Modes		Picture / Format
Sleep		Sleep / Timer
Menu		Menu / Home
Up		Up
Info		Info / Angle
Left		Left

Original	Sustituto	
OK		OK
Right		Right
Back/Exit		Exit / Cancel / Clear
Down		Down
Last		Back / Return
Vol+		Vol+
AVR		Smart / List
CH/Page Up		CH+ / Page+
Vol-		Vol-
CH/Page Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7





















 


Original	Sustituto	Original	Sustituto
1	 1		
DVR	 Display / Media		
DVR Power On	 Power		
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
0	 0		
Menu	 Menu / Home		
Up	 Up		
Down	 Down		
Right	 Right		
Left	 Left		

Original	Sustituto	Original	Sustituto
Mute	 Mute / Dimmer		
Vol+	 Vol+		
Vol-	 Vol-		
CH/Page Up	 CH+ / Page+		
CH/Page Down	 CH- / Page-		





Original	Sustituto
Bluray Power	 Power
Mute	 Mute / Dimmer
Play	 Play / Slow
Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
Rec	 Rec / Rec Mode
<<	 << / Tune-
>>	 >> / Tune+
I<<	 I<< / Preset-
>>I	 >>I / Preset+
Disc Menu	 D.Menu / Top
Menu	 Menu / Home
Up	 Up
Left	 Left
OK	 OK
Right	 Right
Back/Exit	 Exit / Cancel / Clear

Original	Sustituto
Down	 Down
Last	 Back / Return
Vol+	 Vol+
Vol-	 Vol-
Blu-ray	 Display / Media
1	 1
2	 2
3	 3
4	 4
5	 5
6	 6
7	 7
8	 8
9	 9
0	 0
Red	 Red / Netflix / Search
Green	 Green / APP / Repeat





Original	Sustituto
AVR Power On	Power
AVR Power Off	Shift + Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Menu	Menu / Home
Back/Exit	Exit / Cancel / Clear
Last	Back / Return
Up	Up
Down	Down

Original	Sustituto
Right	Right
Left	Left
OK	OK
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Vol+	Vol+
Vol-	Vol-
Mute	Mute / Dimmer
CH/Page Up	CH+ / Page+
CH/Page Down	CH- / Page-
Pause	Pause / Step / Freeze
I<<	I<< / Preset-
>>I	>>I / Preset+
Play	Play / Slow
<<	<< / Tune-



