





 
 

 






















 

 

 

 
 


Original	Sustituto
	 Power
	 Mute / Dimmer
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Zoom / Size
	 Subtitle / EQ
	 Shift + Sleep / Timer
	 Shift + 8
	 TV/Radio /
	 Text / Goto
	 Smart / List
	 Sleep / Timer
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold

Original	Sustituto
	 Rec / Rec Mode
	 Menu / Home
	 Up
	 Exit / Cancel / Clear
	 Left
	 OK
	 Right
	 Guide / EPG / -/-
	 Down
	 Info / Angle
	 I<< / Preset-
	 Audio / Lang I/II
	 << / Tune-
	 >>I / Preset+
	 Shift + 0
	 >> / Tune+
	 1





Original	Sustituto
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0
 Recall	 Back / Return

Original	Sustituto

