


 







 

 

 

 


 


 



 















 



Original	Sustituto
 Power	 Power
 Tv	 TV/R
 PRE CH	 Pre Ch
 0	 0
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Source	 AV

Original	Sustituto
 P+	 Ch +
 P-	 Ch -
 Menu	 Menu
 Exit	 Exit
 Return	 Back
 Tools	 Options
 Guide	 Guide
 Enter	 Ok
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 CH LIST	 List
 Info	 Info
 TTX/MIX	 Text
 SUBT	 Subt
 SRS	 Smart





Original		Sustituto		Original		Sustituto	
	P SIZE		Format				
	Dual		Dual				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	<<		<<				
	>>		>>				
	Rec		Rec				
	AD		Shift + Subt				
	FAV CH		Shift + Pre Ch				

