

 









Original	Sustituto	Original	Sustituto
Standby	Shift + Mute / Dimmer	Info	Info / Angle
Mute	Mute / Dimmer	Left	Left
ATV	Shift + AV / Input / RDS	OK	OK
TV / Radio	TV/Radio /	Right	Right
TV Guide	Guide / EPG / -/--	Menu	Menu / Home
USB	Shift + 8	Down	Down
S.Mode	Sound / Title	Exit	Exit / Cancel / Clear
USB I<<	I<< / Preset-	1	1
USB >>I	>>I / Preset+	2	2
USB Stop	Stop / Hold	3	3
P.Mode	Picture / Format	4	4
USB <<	<< / Tune-	5	5
USB >>	>> / Tune+	6	6
USB Play/Pause	Shift + Play /	7	7
USB Play/Pause	Play / Slow	8	8
AV Source	AV / Input / RDS	9	9
Up	Up	0	0





Original	Sustituto
	 Back / Return
	 Fav / Marker / PC
	 Vol+
	 Subtitle / EQ
	 Shift + Picture / Format
	 CH+ / Page+
	 Vol-
	 Audio / Lang I/II
	 Sleep / Timer
	 CH- / Page-
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Text / Goto
	 Eject / Surround
	 Shift + Back / Return

Original	Sustituto
	 Power
	 Shift + Power
	 Zoom / Size
	 Shift + Stop /
	 Shift + 3

