
 


 
 

 







 




 
 


 


 
 


 


Original	Sustituto	Original	Sustituto
Power ON/Off		Power	
Vol Rs-/Effect		3D	
Sleep		Sleep	
Tape 2 Pre./eq		Options	
CD/Theater		Dual	
Funct./Direct		Smart	
CD Play		Play	
Tape 1 Hall/Ats		Subt	
CD Random		TV/R	
Repeat		Text	
Display		Info	
CD Rewind		<<	
CD F.FWD		>>	
CD Pause		Pause	
Volume+		Vol +	
Volume-		Vol -	
Pr 1		1	
Pr 2		2	
Pr 3		3	
Tape 1 F.FWD		>>I	
6 Ch/Geq		List	
Tape 1 Play		Shift + Play	
Pr 4		4	
Pr 5		5	
Pr 6		6	
Store/Center-		Media	
Pr 7		7	
Pr 8		8	
Program		D. Menu	
Pr 9		9	
Mode		Guide	
Pr 0/10		0	





Original	Sustituto		Original	Sustituto	
Power ON/Off		Power	Pr 4		4
Mute		Mute	Pr 5		5
Tape 1 Stop	 +  Shift + Stop		Phono/Scan		Smart
Tape 2 Pre./eq		Options	Pr 6		6
Input/Source		AV	Tape 1 Rew	 +  Shift + <<	
CD/Theater		Media	Tape 1 Play	 +  Shift + Play	
Volume+		Vol +	Tape 1 F.FWD	 +  Shift + >>	
Tape 1 Hall/Ats		Info	Pr 7		7
CD Play		Play	Tuner/Bypass		Down
CD Rewind		<<	Pr 8		8
Funct./Direct		Menu	Band		Up
Stop		Stop	Fm Mode/Disc		Ok
CD F.FWD		>>			
Volume-		Vol -			
Pr 1		1			
Pr 2		2			
Pr 3		3			




 
 


 



 
 

 


 

 







Original	Sustituto		Original	Sustituto	
Power ON/Off		Power	CD Rewind		<<
Mute		Mute	Funct./Direct		Format
Every Pop		3D	Stop		Stop
Preset Pause	 + 	Shift + Pause	CD F.FWD		>>
Vol Rs-/Effect		Subt	Volume+		Vol +
Tape 1 Preset	 + 	Shift + List	CD Pause		Pause
Sleep		Sleep	Volume-		Vol -
Tape 1 Stop	 + 	Shift + Stop	Pr 1		1
CD Random		Dual	Next/Prog+		>>
Vol Rs+/S.Mode	 + 	Shift + Menu	Mode		D. Menu
Tape 2 Pre./eq		Back	Tape 1 Hall/Ats	 + 	Shift + Options
Repeat		Text	Prev./Prog-		<<
CD/Theater		Options	Program	 + 	Shift + Sleep
Woofer/Speed		0	Tape 1 Rec	 + 	Shift + Rec
Input/Source		AV	Tape 1 Rew	 + 	Shift + <<
CD Play		Play	Tape 1 Play	 + 	Shift + Play
Display		Info	Mark/Delete		Pre Ch





Original	Sustituto	
Tape 1 F.FWD	 + 	Shift + >>
Store/Center-	 + 	Shift + TV/R
Classic Track		9
Tune/Vol SW-		Ch -
Tune/Vol SW+		Ch +
Surround/Test		Guide
Pr 2		2
Erase/Snooze		Red
Pr 3		3
Timer/A.Track	 + 	Shift + AV
Search/Center		TV/R
Tape 2		Up
Track-/Echo	 + 	Shift + Ch -
Edit		Yellow
Track+/Karaoke	 + 	Shift + Ch +
Space/Default 3D	 + 	Shift + Green
Intro		Green

Original	Sustituto	
Ubs/Check		Blue
X-Bass/Bgm	 + 	Shift + Red
Tuner/Bypass		Menu
Disc 4 Eject	 + 	Shift + 4
ON/Off	 + 	Shift + Power
Fm Mode/Disc		Smart
Center		List
Tape 2 REC./Jazz		Down
Disc 1 Eject	 + 	Shift + 1
Tape 2		Left
+10/Next Sv+V	 + 	Shift + Guide
Clear		Exit
Tape 2 FF/AudioR		Right
Tape 2		Ok
Disc 2	 + 	Shift + 2
Index+/Vol Ls+	 + 	Shift + Right
Disc 3 Eject	 + 	Shift + 3





