



Original	Sustituto
 Power	 Power
 Input	 AV / Input / RDS
 Netflix	 Shift + Red / Netflix /
 Youtube	 Shift + Yellow / YouTube /
 Subtitles	 Subtitle / EQ
 Stop	 Stop / Hold
 Mute	 Mute / Dimmer
 <<	 << / Tune-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Text	 Text / Goto
 Guide	 Guide / EPG / -/--
 Aspect	 Picture / Format
 Up	 Up
 Left	 Left
 OK	 OK

Original	Sustituto
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Home	 Menu / Home
 Home	 Shift + Menu /
 Options	 Shift + Setup / OPT / Tools
 Options	 Setup / OPT /
 Vol+	 Vol+
 Vol-	 Vol-
 Google Assist	 Smart / List
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original	Sustituto	Original	Sustituto
6	TUNER 6 6		
7	AUX - HDD 7 7		
8	USB 8 8		
9	BLUETOOTH 9 9		
0	HDMI - BAT 0 0		
Info	ANGLE INFO Info / Angle		
Recall	PC FAV MARKER Fav / Marker / PC		
Red	NETFLIX SEARCH Red / Netflix / Search		
Green	APP REPEAT Green / APP / Repeat		
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat		
Blue	Prime Video RANDOM Blue / Prime Video / Random		

Original	Sustituto

