









 


 

 

 

 

 

 
 
 


 
 
 
 






Original	Sustituto
	 Power
	 +  Shift + AV
	 TV/R
	 List
	 Media
	 Smart
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Pre Ch

Original	Sustituto
	 AV
	 Ch +
	 Ch -
	 Vol +
	 Vol -
	 Mute
	 Format
	 Dual
	 Info
	 Sleep
	 Guide
	 Options
	 D. Menu
	 Text
	 Menu
	 Exit
	 Back



