

 
 









 

 
 
 

 
 


 
 
 

 
 
 
 
 

 




Original	Sustituto
 POWER	 Power
 DISPL. / OFF	 Shift + Power
 SLEEP	 Sleep
 TEXT	 Text
 PRESETS	 Options
 SUBTITLE	 Subt
 AUDIO	 Shift + Dual
 LANG.	 Dual
 ASPECT	 Format
 FREEZE	 Shift + Stop
 RED	 Red
 GREEN	 Green
 YELLOW	 Yellow
 BLUE	 Blue
 MENU	 Menu
 EXIT	 Exit
 UP	 Up

Original	Sustituto
 LEFT	 Left
 OK	 Ok
 RIGHT	 Right
 DOWN	 Down
 GUIDE	 Guide
 INFO	 Info
 VOL+	 Vol +
 VOL-	 Vol -
 SOURCE	 AV
 FAV	 Pre Ch
 MUTE	 Mute
 P+	 Ch +
 P-	 Ch -
 MEDIA	 Media
 <<	 <<
 >>	 >>
 PLAY/PAUSE	 Play





Original	Sustituto	Original	Sustituto
 PLAY/PAUSE	 Pause		
 REC	 Rec		
 I<<	 I<<		
 >>I	 >>I		
 STOP	 Stop		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 RECALL	 Back		
 TV/RADIO	 TV/R		

