




Original	Sustituto	Original	Sustituto
	Power		Power
	Play/Pause		Play
	Play/Pause iPod/iPhone		Pause
	Play/Pause USB		Shift + Play
	Tuner/AUX		Green
	Stop/PTY		Stop
	FM Mode/Play		Yellow
	Timer/Clock		AV
	Sleep/APS		Sleep
	Top Menu		Shift + Menu
	Menu		Menu
	Return		Back
	On Screen		3D
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Vol+		Vol +
	Vol-		Vol -
	Fade Muting		Mute
	Tone		Format
	Group/Title Skip >>I		Ch +
	I<< Group/Title Skip		Ch -
	>>I		>>I
	I<<		I<<
	Repeat		Text
	A-B		Red
	Display		Info
	Subtitle		Subt
	Zoom		Eject
	Audio		Dual
	Angle		Blue
	Progressive		Pre Ch





Original	Sustituto	Original	Sustituto
FILE TYPE 2	File Type	DISC NAV LIST	List
SET UP 3	Setup	SETTINGS OPT	Options
PROGRESSIVE 1	1	1	1
FILE TYPE 2	2	2	2
SET UP 3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
TIME SEARCH 0	0	0	0
TIME SEARCH 0	Time Search	SEARCH TV/R	TV/R

