


 
 
 

 
 


 


 
 




	Original	Sustituto	Original	Sustituto
	 Power	 Power	 Exit	 Exit
	 Mute	 Mute	 Up	 Up
	 1	 1	 Down	 Down
	 2	 2	 Right	 Right
	 3	 3	 Left	 Left
	 4	 4	 OK	 Ok
	 5	 5	 Vol+	 Vol +
	 6	 6	 Vol-	 Vol -
	 7	 7	 Sound	 Shift + Dual
	 8	 8	 PIC	 Format
	 9	 9	 CH+	 Ch +
	 0	 0	 CH-	 Ch -
	 Audio	 Dual	 Sleep	 Sleep
	 Recall	 Back	 Aspect	 3D
	 Tv Menu	 Menu	 Freeze	 Options
	 Source	 AV	 USB	 Media
	 CH List	 List	 Text	 Text





	Original	Sustituto		Original	Sustituto
	EPG	 GUIDE	Guide		I<<
	FAV	 PRE-CH	Pre Ch		>>I
	Info	 INFO	Info		Play
	Red	 A	Red		Pause
	Green	 B	Green		Stop
	Yellow	 C	Yellow		Rec/Rep
	Blue	 D	Blue		
	DTV	 TV/R	TV/R		
	Hold	 Eject	Eject		
	List	 Shift + List	Shift + List		
	Subpage	 Shift + Subt	Shift + Subt		
	Index	 SMART	Smart		
	PVR List	 D. MENU	D. Menu		
	Mix	 Shift + 3D	Shift + 3D		
	Subtitle	 Subt	Subt		
	<<	 <<	<<		
	>>	 >>	>>		

