



Original	Sustituto
Mute	Mute / Dimmer
Power	Power
Input DVD CD	Shift + 2
Input Radio /	Shift + 6
Input VCR	Shift + 4
Input SAT	Shift + 0
Input AV AUX	Shift + 7
1	1
2	2
3	3
4	4
5	5
6	6
Listen Mode	TV/Radio /
7	7
8	8
9	9

Original	Sustituto
Sound	Sound / Title
10+	Guide / EPG / -/-
Clear	Shift + Exit / Cancel / Clear
0	0
100+	Fav / Marker / PC
Input Mode	AV / Input / RDS
Front	Shift + Right
Center	Shift + OK
Rear	Shift + Left
Sub-Woofer	Eject / Surround
Repeat	Green / APP / Repeat
Trim+	CH+ / Page+
Volume+	Vol+
Repeat A-B	Yellow / YouTube / Repeat
Trim-	CH- / Page-
Volume-	Vol-
Top Menu	D.Menu / Top





Original	Sustituto
	Up
	Menu / Home
	Text / Goto
	Left
	OK
	Right
	Exit / Cancel / Clear
	Down
	Display / Media
	Subtitle / EQ
	Audio / Lang I/II
	Stop / Hold
	Pause / Step / Freeze
	Play / Slow
	<< / Tune-
	Shift + << /
	>> / Tune+

Original	Sustituto
	Shift + >> /
	I<< / Preset-
	Shift + I<< / Preset-
	>>I / Preset+
	Shift + >>I / Preset+
	Shift + Play /
	Shift + Pause / Step /
	Zoom / Size
	Picture / Format

