






 

 


 
 



 








 
 










 








Original	Sustituto	Original	Sustituto
 Power	 Power	 Left	 Left
 Open / Close	 Exit	 Enter	 Ok
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Menu	 Menu
 4	 4	 Audio / RL	 Dual
 5	 5	 OSD	 Info
 6	 6	 Zoom	 Eject
 7	 7	 Subtitle	 Subt
 8	 8	 DVD / USB	 Media
 9	 9	 Play / Pause	 Play
 0	 0	 Stop	 Stop
 Vol-	 Vol -	 Repeat	 Text
 Vol+	 Vol +	 Angle	 Format
 Setup	 Options	 <<	 <<
 Search	 TV/R	 >>	 >>
 Up	 Up	 I<<	 I<<

Original	Sustituto	Original	Sustituto
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 Play	 Play
 II	 II	 ■	 ■
 >>>	 >>>	 <<<	 <<<
 DISC NAV	 SOUND	 AD	 SETTINGS
 LIST	 DUAL	 SUBT	 OPT
 PROG	 SEARCH	 PICTURE	 ECO
 SLEEP	 TV/R	 FORMAT	 3D
 E-MANUAL	 REPEAT	 ZOOM	 TIMER
 D.MENU	 TEXT	 AV	 AV
 TOP MENU	 MENU	 MENU	 INFO
 OK	 OK	 CLEAR	 EXIT
 ←	 ←	 RETURN	 BACK
 →	 →	 HOME	 SMART
 ↑	 ↑	 APP	 MEDIA
 ↓	 ↓	 +	 +
 ←	 ←	 -	 -
 →	 →	 1	 2
 >>>	 >>>	 3	 4
 <<<	 <<<	 5	 6
I<<	I<<	7	8
>>>	>>>	9	9
<<<	<<<	GUIDE	0
I<<	I<<	FAV	PRE-CH
>>>	>>>	A	B
<<<	<<<	C	D
I<<	I<<	Mandis SHOP	Mandis SHOP
>>>	>>>	www.mandis.tv	www.mandis.tv



