

 



 

 
 
 
 
 




 

 




 

 









 


 


 


 

 



 
 
 

 

 














Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 CH. List	 Guide
 Recall	 Back
 Vol+	 Vol +
 Vol-	 Vol -
 Pic. Mode	 Shift + Format

Original	Sustituto
 S.Mode	 Shift + Dual
 Source	 AV
 CH+	 Ch +
 CH-	 Ch -
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Exit	 Exit
 Menu	 Menu
 Home	 Smart
 Mouse	 D. Menu
 IE	 Media
 Red	 Red
 Green	 Green
 Yellow	 Yellow





Original	Sustituto	Original	Sustituto
	Blue		Blue
	TV / Radio		TV/R
	Aspect		Format
	Sleep		Sleep
	Subtitle		Subt
	Index		List
	Reveal		Shift + Ok
	Text		Text
	Play / Size		Play
	Audio		Dual
	Display		Info
	Pause /		Pause
	Stop / Hold		Stop
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>

