



 

 
 
 


 
 
 

 
Original	Sustituto
 Power	 Power
 CBL/SAT	 Shift + 1
 DVD	 Shift + 2
 TV Audio	 TV/R
 Blu-ray	 Shift + 3
 AUX1	 Shift + 4
 Tuner	 Shift + 8
 Bluetooth	 Shift + 9
 Game	 Shift + 5
 AUX2	 Shift + 6
 Phono	 Guide
 iPod/USB	 Shift + 0
 Media Player	 Media
 CD	 Shift + 7
 Online Music	 Smart
 Internet Radio	 Pre Ch
 Quick Select 1	 D. Menu

Original	Sustituto
 Quick Select 2	 Text
 Quick Select 3	 Eject
 Quick Select 4	 AV
 CH/Page Up	 Ch +
 CH/Page Down	 Ch -
 Eco	 3D
 Volume+	 Vol +
 Volume-	 Vol -
 Mute	 Mute
 Info	 Info
 Option	 Options
 Back	 Back
 Setup	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Original	Sustituto	Original	Sustituto
 Enter	 Ok	 5	 5
 I<</Tune-	 I<<	 6	 6
 Play	 Play	 7	 7
 >>I/Tune+	 >>I	 8	 8
 <<	 <<	 9	 9
 Pause	 Pause	 0	 0
 Stop	 Stop		
 >>	 >>		
 Green/Movie	 Green		
 Red/Music	 Red		
 Blue/Game	 Blue		
 Yellow/Pure	 Yellow		
 Sleep	 Sleep		
 1	 1		
 2	 2		
 3	 3		
 4	 4		

Original	Sustituto
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0



 











 




 
 

 
 
 

 

 





Original	Sustituto
 Power	 Power
 CBL/SAT	 Shift + 1
 DVD	 Shift + 2
 TV Audio	 TV/R
 Blu-ray	 Shift + 3
 AUX1	 Shift + 4
 Tuner	 Shift + 8
 Bluetooth	 Shift + 9
 Game	 Shift + 5
 AUX2	 Shift + 6
 Phono	 Guide
 iPod/USB	 Shift + 0
 Media Player	 Media
 CD	 Shift + 7
 Online Music	 Smart
 Internet Radio	 Pre Ch
 Quick Select 1	 D. Menu

Original	Sustituto
 Quick Select 2	 Text
 Quick Select 3	 Eject
 Quick Select 4	 AV
 CH/Page Up	 Ch +
 CH/Page Down	 Ch -
 Volume+	 Vol +
 Volume-	 Vol -
 Mute	 Mute
 Back	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 I<<	 I<<
 Play	 Play
 >>I	 >>I





Original	Sustituto	Original	Sustituto
	<<		<<
	Pause		Pause
	Stop		Stop
	>>		>>
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Original	Sustituto











 


 
 
 
 

 

 
 
 
 
 
 
 

 





Original	Sustituto
 Power	 Power
 CBL/SAT	 Shift + 1
 DVD	 Shift + 2
 TV Audio	 TV/R
 Blu-ray	 Shift + 3
 AUX1	 Shift + 4
 Tuner	 Shift + 8
 Bluetooth	 Shift + 9
 Game	 Shift + 5
 AUX2	 Shift + 6
 Phono	 Guide
 iPod/USB	 Shift + 0
 Media Player	 Media
 CD	 Shift + 7
 Online Music	 Smart
 Internet Radio	 Pre Ch
 Quick Select 1	 D. Menu

Original	Sustituto
 Quick Select 2	 Text
 Quick Select 3	 Eject
 Quick Select 4	 AV
 CH/Page Up	 Ch +
 CH/Page Down	 Ch -
 Volume+	 Vol +
 Volume-	 Vol -
 Mute	 Mute
 Back	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 I<</Tune-	 I<<
 Play	 Play
 >>I/Tune+	 >>I





Original	Sustituto	Original	Sustituto
	<<		<<
	Pause		Pause
	Stop		Stop
	>>		>>
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Original	Sustituto

