


 

 

 










 





 
 

 
 


 
 





 
 




Original	Sustituto
 Power	 Power
 Eject	 Shift + Eject
 Open/Close	 Eject
 Display Call	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AV	 0
 Channel+	 Ch +
 Channel-	 Ch -
 Showview/Progra	 Guide

Original	Sustituto
 Timer Rec	 AV
 Rec OTR	 Rec
 Marker/Tape	 Options
 Jump/Zero Return	 Pre Ch
 Clock/Counter	 Yellow
 Counter Reset	 Green
 Tv/VCR	 TV/R
 VCR	 Smart
 DVD	 Media
 Setup Menu	 Menu
 DVD Menu	 D. Menu
 Up	 Up
 Down	 Down
 Right/TRK+	 Right
 Left/TRK-	 Left
 Enter/Select	 Ok
 Title	 Red





Original	Sustituto
RETURN	BACK
STOP	STOP
PLAY	PLAY
PAUSE/STILL	PAUSE
- INDEX/SKIP	I<< -
SEARCH	<<
SEARCH	>>
SKIP/INDEX +	>>I
SLOW	Blue
CANCEL	EXIT
REPEAT A-B	Text
ZOOM	3D
ANGLE	List
PLAY MODE	Shift + Play
SUB TITLE	Subt
AUDIO	Dual

Original	Sustituto

