
























| Original | Sustituto |
|---|---|
|  |  Power |
|  |  Smart / List |
|  |  Sleep / Timer |
|  |  Mute / Dimmer |
|  |  Vol+ |
|  |  AV / Input / RDS |
|  |  CH+ / Page+ |
|  |  Vol- |
|  |  Picture / Format |
|  |  CH- / Page- |
|  |  TV/Radio / |
|  |  Eject / Surround |
|  |  Audio / Lang I/II |
|  |  Play / Slow |
|  |  Pause / Step / Freeze |
|  |  Display / Media |
|  |  Stop / Hold |

| Original | Sustituto |
|---|--|
|  |  Subtitle / EQ |
|  |  Menu / Home |
|  |  Up |
|  |  Exit / Cancel / Clear |
|  |  << / Tune- |
|  |  Left |
|  |  OK |
|  |  Right |
|  |  Fav / Marker / PC |
|  |  >>I / Preset+ |
|  |  Down |
|  |  >> / Tune+ |
|  |  Guide / EPG / -/- |
|  |  I<< / Preset- |
|  |  Text / Goto |
|  |  Info / Angle |
|  |  Red / Netflix / Search |





| Original | Sustituto |
|----------------|------------------------------|
| Red/Dvd Menu | D.Menu / Top |
| Green/Lang | Green / APP / Repeat |
| Green/Lang | Shift + Audio / Lang I/II |
| Yellow/Repeat | Yellow / YouTube / Repeat |
| Yellow/Repeat | Shift + Green / APP / Repeat |
| Blue/Dvd Setup | Blue / Prime Video / Random |
| Blue/Dvd Setup | Setup / OPT / |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| -/-- | Shift + Guide / EPG / -/-- |

| Original | Sustituto |
|----------|---------------|
| 0 | 0 |
| Return | Back / Return |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

