
 

 
 
 




Original	Sustituto
 System Standby	 Power
 Sleep	 Sleep
 Master Vol+	 Vol +
 Master Vol-	 Vol -
 Muting	 Mute
 Top Menu	 Menu
 DVD Menu	 D. Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Recall	 Pre Ch
 >>I/CH/Preset+	 >>I
 I<</CH/Preset-	 I<<
 <<	 <<
 >>	 >>

Original	Sustituto
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Tv/Video/ANT	 TV/R
 Main Menu	 Smart
 Test Tone	 Back
 Multi CH	 3D
 2CH	 Subt
 AFD	 Dual
 A.F.D.	 List
 +	 Ch +
 -	 Ch -
 Menu >	 Shift + Right
 < Menu	 Shift + Left
 Tv CH+	 Shift + Ch +
 Tv CH-	 Shift + Ch -
 Tv Vol+	 Shift + Vol +






Original	Sustituto
Tv Vol-	Shift + Vol -
D.Skip/TV/VTR	Text
Video1	Red
Video 2	Green
SA-CD	Yellow
DVD	Blue
MD/Tape	AV
Tuner	Eject
Standby AV	Shift + Power
1 Tuner	1
2 Tuner	2
3 Tuner	3
4 Tuner	4
5 Tuner	5
6 Tuner	6
7 Tuner	7
8 Tuner	8

Original	Sustituto
9 Tuner	9
0 Tuner	0
>10 Tuner/Shift/-	Guide
Enter/D.Tuning/Return Tuner	Info
Preset+ Tuner	Shift + >>
Preset- Tuner	Shift + <<





Original	Sustituto
 Standby	 Power
 Video 1	 Red
 Video 2	 Green
 SA-CD	 Yellow
 DVD	 Blue
 MD/Tape	 AV
 Tuner	 Eject
 Master Vol+	 Vol +
 Master Vol-	 Vol -
 Muting	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
7	7

Original	Sustituto
 8	 8
 9	 9
 0	 0
 >10/Shift/-/	 Guide
 Enter	 Info
 D.Skip	 Text
 I<<	 I<<
 >>I	 >>I
 <<	 <<
 >>	 >>
 Play	 Play
 Pause	 Pause
 Stop	 Stop





Original	Sustituto
 Standby CD	 Power
 Video 1	 Red
 Video 2	 Green
 SA-CD	 Yellow
 DVD	 Blue
 MD/Tape	 AV
 Tuner	 Eject
 1 CD	 1
 2 CD	 2
 3 CD	 3
 4 CD	 4
 5 CD	 5
 6 CD	 6
 7 CD	 7
 8 CD	 8
 9 CD	 9
0 CD	0

Original	Sustituto
 >10/Shift/-/-- CD	 Guide
 Enter CD	 Info
 I<< CD	 I<<
 >>I CD	 >>I
 << CD	 <<
 >> CD	 >>
 Play CD	 Play
 Pause CD	 Pause
 Stop CD	 Stop
 D.Skip CD	 Text
 Master Vol+	 Vol +
 Master Vol-	 Vol -
 Muting	 Mute
 Standby Video	 Shift + Power
 1 Video 1	 Shift + 1
 2 Video 1	 Shift + 2
3 Video 1	Shift + 3





Original	Sustituto	Original	Sustituto
	+ Shift + 4		
	+ Shift + 5		
	+ Shift + 6		
	+ Shift + 7		
	+ Shift + 8		
	+ Shift + 9		
	+ Shift + 0		
	+ Shift + Guide		
	+ Shift + Info		
	+ Shift + Text		
	+ Shift + I<<		
	+ Shift + <<		
	+ Shift + >>		
	+ Shift + >>I		
	+ Shift + Play		
	+ Shift + Pause		
	+ Shift + Stop		
















 


 






 




Original	Sustituto
 Standby	 Power
 Video 1	 Red
 Video 2	 Green
 SA-CD	 Yellow
 DVD	 Blue
 MD/Tape	 AV
 Tuner	 Eject
 1 MD/Tape	 1
 2 MD/Tape	 2
 3 MD/Tape	 3
 4 MD/Tape	 4
 5 MD/Tape	 5
 6 MD/Tape	 6
 7 MD/Tape	 7
 8 MD/Tape	 8
 9 MD/Tape	 9
0 MD/Tape	0

Original	Sustituto
 >10/Shift/-/ MD/Tape	 Guide
 Enter MD/Tape	 Info
 D.Skip/TV/VTR MD/Tape	 Text
 CH- MD/Tape	 I<<
 CH+ MD/Tape	 >>I
 << MD/Tape	 <<
 >> MD/Tape	 >>
 Play MD/Tape	 Play
 Pause MD/Tape	 Pause
 Stop MD/Tape	 Stop
 Muting	 Mute
 Master Vol+	 Vol +
 Master Vol-	 Vol -
 Standby Video	 Shift + Power
 1 Video 2	 Shift + 1
 2 Video 2	 Shift + 2
3 Video 2	Shift + 3





Original	Sustituto
 4 Video 2	 +  Shift + 4
 5 Video 2	 +  Shift + 5
 6 Video 2	 +  Shift + 6
 7 Video 2	 +  Shift + 7
 8 Video 2	 +  Shift + 8
 9 Video 2	 +  Shift + 9
 0 Video 2	 +  Shift + 0
 >10/Shift/--- Video 2	 +  Shift + Guide
 Enter Video 2	 +  Shift + Info
 TV/VTR Video 2	 +  Shift + Text
 CH- Video 2	 +  Shift + I<<
 CH+ Video 2	 +  Shift + >>I
 << Video 2	 +  Shift + <<
 >> Video 2	 +  Shift + >>
 Play Video 2	 +  Shift + Play
 Stop Video 2	 +  Shift + Stop
 Pause Video 2	 +  Shift + Pause

Original	Sustituto

