



Original	Sustituto
Power	Power
CBL/SAT	Shift + 0
DVD	Shift + 2
TV Audio	Shift + 1
Blu-ray	Shift + 5
AUX1	Shift + 7
Tuner	Shift + 6
Bluetooth	Shift + 9
Game	Shift + Fav / Marker / PC
AUX2	Shift + Guide / EPG / -/-
Phono	Shift + 4
USB	Shift + 8
Media Player	Display / Media
CD	Shift + 3
Online Music	Smart / List
Internet Radio	Shift + Smart / List
CH/Page+	CH + / Page+

Original	Sustituto
Sleep	Sleep / Timer
Volume+	Vol+
CH/Page-	CH- / Page-
Mute	Mute / Dimmer
Volume-	Vol-
Eco	D.Menu / Top
Info	Info / Angle
Up	Up
Option	Shift + Setup / OPT / Tools
Left	Left
Right	Right
Back	Back / Return
Down	Down
Setup	Setup / OPT /
Home	Menu / Home
Stop	Stop / Hold
Pause	Pause / Step / Freeze





Original	Sustituto
	Play / Slow
	Tune- / Preset-
	Shift + Tune- / << /
	Tune+ / Preset+
	Shift + Tune+ / >> /
	Tune- / Tune-
	Tune+ / Tune+
	Shift + Red / Netflix / Search
	Shift + Green / APP / Repeat
	Shift + Yellow / YouTube / Repeat A-B
	Shift + Blue / Prime Video / Random
	Green / APP / Repeat
	Red / Netflix / Search
	Blue / Prime Video / Random
	Yellow / YouTube / Repeat
	TV 1
	DVD 2

Original	Sustituto
	3
	4
	5
	6
	7
	8
	9
	0
	OK





Original	Sustituto
Power	Power
CBL/SAT	Shift + 0
DVD	Shift + 2
TV Audio	Shift + 1
Blu-ray	Shift + 5
AUX1	Shift + 7
Tuner	Shift + 6
Bluetooth	Shift + 9
Game	Shift + Fav / Marker / PC
AUX2	Shift + Guide / EPG / -/-
Phono	Shift + 4
USB	Shift + 8
Media Player	Display / Media
CD	Shift + 3
Online Music	Smart / List
Internet Radio	Shift + Smart / List
CH/Page+	CH+ / Page+

Original	Sustituto
Sleep	Sleep / Timer
Volume+	Vol+
CH/Page-	CH- / Page-
Mute	Mute / Dimmer
Volume-	Vol-
Up	Up
Left	Left
Right	Right
Back	Back / Return
Down	Down
Home	Menu / Home
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow
I<</Tune-	Shift + << /
I<</Tune-	I<< / Preset-
>>I/Tune+	>>I / Preset+





	Original	Sustituto	Original	Sustituto
	>>/Tune+	+ Shift + >> /		Enter
	<<	<< / Tune-		OK
	>>	>> / Tune+		
	Smart Select 1	Red / Netflix / Search		
	Smart Select 2	Green / APP / Repeat		
	Smart Select 3	Yellow / YouTube / Repeat		
	Smart Select 4	Blue / Prime Video / Random		
	1	1		
	2	2		
	3	3		
	4	4		
	5	5		
	6	6		
	7	7		
	8	8		
	9	9		
	0	0		




 
 
 



 


Original	Sustituto
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 TV Audio	 Shift + 1
 Blu-ray	 Shift + 5
 AUX1	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Fav / Marker / PC
 AUX2	 Shift + Guide / EPG / -/-
 Phono	 Shift + 4
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Online Music	 Smart / List
 Internet Radio	 Shift + Smart / List
 CH/Page+	 CH+ / Page+

Original	Sustituto
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 Shift + << /
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+





Original		Sustituto		Original		Sustituto	
	>> /Tune+		Shift + >> /		Enter		OK
	<<		<< / Tune-				
	>>		>> / Tune+				
	Smart Select 1		Red / Netflix / Search				
	Smart Select 2		Green / APP / Repeat				
	Smart Select 3		Yellow / YouTube / Repeat				
	Smart Select 4		Blue / Prime Video / Random				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				

