







 

 

 

 







Original	Sustituto
Power	Power
CBL/SAT	Shift + 0
DVD	Shift + 2
TV Audio	Shift + 1
Blu-ray	Shift + 5
AUX1	Shift + 7
Tuner	Shift + 6
Bluetooth	Shift + 9
Game	Shift + Fav / Marker / PC
AUX2	Shift + Guide / EPG / -/-
Phono	Shift + 4
USB	Shift + 8
Media Player	Display / Media
CD	Shift + 3
Online Music	Smart / List
Internet Radio	Shift + Smart / List
CH/Page+	CH + / Page+

Original	Sustituto
Sleep	Sleep / Timer
Volume+	Vol+
CH/Page-	CH- / Page-
Mute	Mute / Dimmer
Volume-	Vol-
Eco	D.Menu / Top
Info	Info / Angle
Up	Up
Option	Shift + Setup / OPT / Tools
Left	Left
Right	Right
Back	Back / Return
Down	Down
Setup	Setup / OPT /
Home	Menu / Home
Stop	Stop / Hold
Pause	Pause / Step / Freeze





Original	Sustituto
 Play	 Play / Slow
 I<</Tune-	 I<< / Preset-
 I<</Tune-	 Shift + << /
 >>I/Tune+	 >>I / Preset+
 >>I/Tune+	 Shift + >> /
 <<	 << / Tune-
 >>	 >> / Tune+
 Smart Select 1	 Shift + Red / Netflix / Search
 Smart Select 2	 Shift + Green / APP / Repeat
 Smart Select 3	 Shift + Yellow / YouTube / Repeat A-B
 Smart Select 4	 Shift + Blue / Prime Video / Random
 Green/Movie	 Green / APP / Repeat
 Red/Music	 Red / Netflix / Search
 Blue/Game	 Blue / Prime Video / Random
 Yellow/Pure	 Yellow / YouTube / Repeat
 1	 1
 2	 2

Original	Sustituto
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Enter	 OK







Original	Sustituto
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 TV Audio	 Shift + 1
 Blu-ray	 Shift + 5
 AUX1	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Fav / Marker / PC
 AUX2	 Shift + Guide / EPG / -/-
 Phono	 Shift + 4
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Online Music	 Smart / List
 Internet Radio	 Shift + Smart / List
 CH/Page+	 CH+ / Page+

Original	Sustituto
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 Shift + << /
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+





Original	Sustituto	Original	Sustituto
>>/Tune+	+  Shift + >>/	Enter	OK
<<	<< / Tune-		
>>	>> / Tune+		
Smart Select 1	Red / Netflix / Search		
Smart Select 2	Green / APP / Repeat		
Smart Select 3	Yellow / YouTube / Repeat		
Smart Select 4	Blue / Prime Video / Random		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
0	0		







Original	Sustituto
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 TV Audio	 Shift + 1
 Blu-ray	 Shift + 5
 AUX1	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Fav / Marker / PC
 AUX2	 Shift + Guide / EPG / -/-
 Phono	 Shift + 4
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Online Music	 Smart / List
 Internet Radio	 Shift + Smart / List
 CH/Page+	 CH+ / Page+

Original	Sustituto
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 Shift + << /
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+





Original	Sustituto
>>/Tune+	+  Shift + >> /
<<	<< / Tune-
>>	>> / Tune+
Smart Select 1	Red / Netflix / Search
Smart Select 2	Green / APP / Repeat
Smart Select 3	Yellow / YouTube / Repeat
Smart Select 4	Blue / Prime Video / Random
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0

Original	Sustituto
Enter	OK

