






 

















 

 







Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Lang	 Dual
 TXT	 Text
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Source	 AV

Original	Sustituto
 P+	 Ch +
 P-	 Ch -
 Home	 Smart
 [G]	 Guide
 i	 Info
 Back	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Netflix	 Media
 YouTube	 Shift + Media
 *1	 Format
 *2	 3D
 Red	 Red





Original	Sustituto	Original	Sustituto
	Green		Green
	Yellow		Yellow
	Blue		Blue
	>>		>>
	Pause		Pause
	>>		>>
	Rec		Rec
	Play		Play
	Stop		Stop

