



 
 


 


 
 


 

 

 



 

 

 







 



 



 

 















 






 


 



 





 



 






Original	Sustituto
 Power	 Power
 Mute	 Mute
 TV	 Shift + 1
 REC	 Shift + 2
 DVD	 Shift + 3
 Audio	 Shift + 4
 Timer	 AV
 Zoom	 Eject
 Audio	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Sustituto
 9	 9
 0/AV	 0
 EPG/Music-ID	 Guide
 Media	 Media
 PIP/Input	 Format
 Text/Disc-M	 Text
 Menu/Title	 Menu
 End	 Exit
 Info	 Info
 V+	 Vol +
 V-	 Vol -
 P+	 Ch +
 P-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





 
 


 


 
 


 

 

 

 



 

 

 









 



 



 

 















 






Original	Sustituto	Original	Sustituto
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue/Marker		Blue
	<<		<<
	Play		Play
	>>		>>
	Rec/Back		Rec
	Pause		Pause
	Stop		Stop



 


 









 



 



 


Original	Sustituto
 Power	 Power
 Mute	 Mute
 TV	 Shift + 1
 REC	 Shift + 2
 DVD	 Shift + 3
 Audio	 Shift + 4
 Timer	 AV
 Zoom	 Eject
 Audio	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Sustituto
 9	 9
 0/AV	 0
 EPG/Music-ID	 Guide
 Media	 Media
 PIP/Input	 Format
 Text/Disc-M	 Text
 Menu/Title	 Menu
 End	 Exit
 Info	 Info
 V+	 Vol +
 V-	 Vol -
 P+	 Ch +
 P-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





 



 


 
 






 





 

 









 

 







 
























Original	Sustituto	Original	Sustituto
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue/Marker		Blue
	<<		<<
	Play		Play
	>>		>>
	Rec/Back		Rec
	Pause		Pause
	Stop		Stop



 


 



 





 



 






Original	Sustituto
 Power	 Power
 Mute	 Mute
 TV	 Shift + 1
 REC	 Shift + 2
 DVD	 Shift + 3
 Audio	 Shift + 4
 Timer	 AV
 Zoom	 Eject
 Audio	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Sustituto
 9	 9
 0/AV	 0
 EPG-Music-ID	 Guide
 Media	 Media
 PIP/Input	 Format
 Text/Disc-M	 Text
 Menu/Title	 Menu
 End	 Exit
 Info	 Info
 V+	 Vol +
 V-	 Vol -
 P+	 Ch +
 P-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left




 



 


 
 






 





 

 









 

 






 























Original	Sustituto	Original	Sustituto
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue/Marker		Blue
	<<		<<
	Play		Play
	>>		>>
	Rec/Back		Rec
	Pause		Pause
	Stop		Stop



 


 

 














Original	Sustituto
 Power	 Power
 Mute	 Mute
 TV	 Shift + 1
 REC	 Shift + 2
 DVD	 Shift + 3
 Audio	 Shift + 4
 Timer	 AV
 Zoom	 Eject
 Audio	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Sustituto
 9	 9
 0/AV	 0
 EPG/Music-ID	 Guide
 Media	 Media
 PIP/Input	 Format
 Text/Disc-M	 Text
 Menu/Title	 Menu
 End	 Exit
 Info	 Info
 V+	 Vol +
 V-	 Vol -
 P+	 Ch +
 P-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Original	Sustituto	Original	Sustituto
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue/Marker		Blue
	<<		<<
	Play		Play
	>>		>>
	Rec/Back		Rec
	Pause		Pause
	Stop		Stop

