



 



 





 


 
 

 

 

 











Original	Sustituto	Original	Sustituto
	Power		Power
	Review		Smart / List
	Left/ <</-		Left
	Left/ <</-		<< / Preset-
	Right/>> /+		Right
	Right/>> /+		>> / Preset+
	Tv/VCR		AV / Input / RDS
	--:--		Exit / Cancel / Clear
	Audio		Audio / Lang I/II
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	X		Back / Return
	9		9
	0		0
	Timer		Sleep / Timer
	PR+		CH+ / Page+
	Start Debut +		Green / APP / Repeat
	Start Debut -		Red / Netflix / Search
	Stop Fin +		Blue / Prime Video / Random
	PR-		CH- / Page-
	Stop Fin -		Yellow / YouTube / Repeat
	Date-		Vol-
	Date+		Vol+
	Prog		TV/Radio /
	<<		<< / Tune-
	30 Sec/>>		Display / Media
	Timer/?		Shift + Sleep / Timer
	Play		Play / Slow





Original	Sustituto
	 Guide / EPG / -/--
	 >> / Tune+
	 Rec / Rec Mode
	 Stop / Hold
	 Pause / Step / Freeze
	 Menu / Home
	 OK
	 Up
	 Down
	 Shift + Vol-
	 Shift + Vol+
	 Shift + CH- /
	 Shift + CH+ /
	 Shift + AV / Input / RDS
	 Shift + Power
	 Shift + Mute / Dimmer

Original	Sustituto

