 

 
 
 

 
 
 
 
 
 
 


 
 



 



 



 



 



 
 


 
 




 


 
 





















Original		Sustituto		Original		Sustituto	
	On/Standby		Power		Sleep		Sleep
	Open/Close		Eject		Bass/Treble		Options
	1		1		X-Bass		Dual
	2		2		Random		Subt
	3		3		<</></Tuning		<<
	4		4		>>/>>/Tuning		>>
	5		5		Folder		Text
	6		6		Demo/Dimmer		Info
	7		7		Preset Up		Up
	8		8		Preset Down		Down
	9		9		Enter		Ok
	0		0		Vol+		Vol +
	10+		Guide		Vol+		Right
	Back/Repeat		Back		Vol-		Vol -
	Memory		Smart		Vol-		Left
	Clear		Exit		Mute		Mute
	Clock/Timer		AV		CD		Yellow





Original	Sustituto	Original	Sustituto
USB	Green		
Tuner	Blue		
Input/Audio/Line	Red		
iPod	3D		
(Tv Out)/Display	TV/R		
Menu	Menu		
Play/Pause iPod	Play		
Display CD/USB	Ch +		
Stop CD/USB	Stop		
Play/Pause	Pause		
ASPM RDS	D. Menu		
PTY RDS	Format		
Display RDS	Ch -		

