





| Original   | Sustituto   |
|--|---|
|  Power  |  Power                   |
|  1      |  1                       |
|  2      |  2                       |
|  3      |  3                       |
|  Mute   |  Mute / Dimmer           |
|  4      |  4                       |
|  5      |  5                       |
|  6      |  6                       |
|  Recall |  Back / Return           |
|  7      |  7                       |
|  8     |  8                      |
|  9    |  9                     |
|  0    |  0                     |
|  Menu |  Menu / Home           |
|  Up   |  Up                    |
|  CH+  |  CH+ / Page+           |
|  Exit |  Exit / Cancel / Clear |

| Original   | Sustituto  |
|--|--|
|  Left     |  Left                 |
|  Vol-     |  Vol-                 |
|  OK       |  OK                   |
|  Right    |  Right                |
|  Vol+     |  Vol+                 |
|  Pg Up    |  Shift + CH+ /        |
|  Down     |  Down                 |
|  CH-      |  CH- / Page-          |
|  Pg Dn    |  Shift + CH- /        |
|  Tv/Radio |  TV/Radio /           |
|  Info    |  Info / Angle        |
|  FAV    |  Fav / Marker / PC  |
|  Audio  |  Audio / Lang I/II  |
|  Sub-T  |  Subtitle / EQ      |
|  TTX    |  Text / Goto        |
|  EPG    |  Guide / EPG / -/-- |
|  Play   |  Play / Slow        |



