

















Original	Sustituto
	Mute / Dimmer
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Guide / EPG / -/--
	0
	Smart / List
	D.Menu / Top
	Info / Angle
	TV/Radio /

Original	Sustituto
	Up
	Left
	OK
	Right
	Down
	Exit / Cancel / Clear
	Back / Return
	Menu / Home
	CH+ / Page+
	Text / Goto
	Setup / OPT /
	Vol+
	CH- / Page-
	Shift + 1
	Shift + 2
	Vol-
	Rec / Rec Mode





Original	Sustituto
 Play	 Play / Slow
 Archive	 Display / Media
 <<	 << / Tune-
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Sustituto

