
 
 





 

 




 

 

 






Original	Sustituto
	Power
	Mute
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	SHIFT +  Shift + Guide
	 Back
	SHIFT +  Shift + Format
	 Dual
	 Sleep

Original	Sustituto
	Vol +
	Vol -
	 Format
	Ch +
	Ch -
	 Media
	 Pre Ch
	 Smart
	 TV/R
	 Menu
	 AV
	 Up
	 Left
	 Ok
	 Right
	 Down
	 Exit





Original	Sustituto
Display	Info
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
<< / Text	<<
<< / Text	Text
Play/Pause /	Play
Play/Pause /	Pause
>> / Reveal	>>
I<< / Cancel	I<<
>>I / Freeze	>>I
Stop / Index	Stop
EPG	Guide
Rec	Rec
Sub-T	Subt
Size	Eject

Original	Sustituto
Hold	Shift + Stop
Mix	Shift + Text

