


 
 

 


 
 

 

 



 
 
 
 
 

 


 

 


 

 
 



 
 

 




	Original	Sustituto		Original	Sustituto
	Power		Power		Dev.List
	Mute		Mute		List
	1		1		Guide
	2		2		Subt
	3		3		Text
	4		4		Auto
	5		5		Options
	6		6		Text
	7		7		Menu
	8		8		Menu
	9		9		Zoom
	0		0		Info
	FAV		Pre Ch		Eject
	Recall		Back		Info
	Lang		Dual		Exit
	Time Shift		Smart		Ch +
	Tv/Radio		TV/R		Ch -
					Up
					Down
					Right
					Left
					Enter
					Vol +
					Ok
					Vol +





Original	Sustituto	Original	Sustituto
	 Vol -		
	 Media		
	 Rec		
	 Stop		
	 Play		
	 Pause		
	 <<		
	 >>		
	 I<<		
	 >>I		
	 Red		
	 Green		
	 Yellow		
	 Blue		

