



Original	Sustituto
Off	Shift + Power
On	Power
Mute	Mute / Dimmer
AVR	Smart / List
DVD	Shift + 2
CD	Shift + 3
Tape	Shift + 5
VID1/VCR	Shift + 4
VID2/TV	Shift + 1
VID3/CBL/SAT	Shift + 0
VID4	Shift + 7
AM/FM	Shift + 6
6 CH	Shift + 8
Sleep	Sleep / Timer
Test	Text / Goto
Vol+	Vol+
Surr.	Eject / Surround

Original	Sustituto
Night	TV/Radio /
M-Room	Zoom / Size
Vol-	Vol-
CH.	Info / Angle
Up	Up
SPKR/Menu	Menu / Home
Left	Left
Set	OK
Right	Right
Digital	D.Menu / Top
Down	Down
Delay/Normal	Setup / OPT /
1	1
2	2
3	3
4	4
5	5





Original	Sustituto
6	TUNER 6
7	AUX - HDD 7
8	USB 8
TUN-M	NETFLIX SEARCH Red / Netflix / Search
9	BLUETOOTH 9
0	HDMI - BAT 0
MEM	APP REPEAT Green / APP / Repeat
Tuning ▲	TUNE+ >> / Tune+
DIRECT	RETURN BACK Back / Return
CLEAR	CLEAR EXIT CANCEL Exit / Cancel / Clear
Preset ▲	PRESET+ >>I / Preset+
Tuning ▼	TUNE- << / Tune-
OSD	MEDIA DISPLAY Display / Media
RDS	RDS AV INPUT AV / Input / RDS
Preset ▼	PRESET- I<< / Preset-
<< DVD	SHIFT + TUNE- Shift + << /
Play DVD	SHIFT + SLOW Shift + Play / Slow

Original	Sustituto
>> DVD	SHIFT + TUNE+ Shift + >> /
Stop DVD	SHIFT + HOLD Shift + Stop /
Pause DVD	SHIFT + STEP - FREEZE Shift + Pause / Step /
I<</Skip Down	SHIFT + PRESET- Shift + I<< / Preset-
Skip Up/>>I	SHIFT + PRESET+ Shift + >>I / Preset+





Original	Sustituto
Power Off	Shift + Power
Power On	Power
Vol+	Vol+
Night	TV/Radio /
[≡] / M-Room	Zoom / Size
Vol-	Vol-
CH.	Info / Angle
Up	Up
SPKR/Menu	Menu / Home
Left	Left
Set	OK
Right	Right
Digital/Exit	D.Menu / Top
Down	Down
Delay/Normal	Setup / OPT /
1	1
2	2

Original	Sustituto
3	3
4	4
5	5
6	6
7	7
8	8
Tun-M	Red / Netflix / Search
9	9
0	0
Mem	Green / APP / Repeat
Direct	Back / Return
Clear	Exit / Cancel / Clear
Preset ▲	Shift + >>I / Preset+
RDS	AV / Input / RDS
Preset ▼	Shift + I<< / Preset-
<<	<< / Tune-
Play	Play / Slow





Original	Sustituto	Original	Sustituto
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	>>I		>>I / Preset+





Original	Sustituto
Power On	Power
Power Off	Shift + Power
Vol-	Vol-
Vol+	Vol+
SPKR/Menu	Menu / Home
1	1
Delay/Normal	Setup / OPT /
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Tun-M	Red / Netflix / Search

Original	Sustituto
Mem	Green / APP / Repeat
RDS	AV / Input / RDS
>>	>> / Tune+
<<	<< / Tune-
Play	Play / Slow
Stop	Stop / Hold
Direct	Back / Return
Pause	Pause / Step / Freeze
Preset ▲	CH+ / Page+
>>	>> / Preset+
<<	<< / Preset-
Power (On/Off)	Mute / Dimmer
PR+ VCR	Shift + CH+ /
PR- VCR	Shift + CH- /
Vol- VCR	Shift + Vol-
Vol+ VCR	Shift + Vol+
1 VCR	Shift + 1





	Original	Sustituto	
2	2 VCR	SHIFT + DVD 2	Shift + 2
3	3 VCR	SHIFT + CD - STB 3	Shift + 3
4	4 VCR	SHIFT + VIDEO 4	Shift + 4
5	5 VCR	SHIFT + TAPE 5	Shift + 5
6	6 VCR	SHIFT + TUNER 6	Shift + 6
7	7 VCR	SHIFT + AUX - HDD 7	Shift + 7
8	8 VCR	SHIFT + USB 8	Shift + 8
9	9 VCR	SHIFT + BLUETOOTH 9	Shift + 9
0	0 VCR	SHIFT + HDMI - SAT 0	Shift + 0
CLEAR	Clear VCR	SHIFT + CLEAR + EXIT	Shift + Exit / Cancel / Clear
▶	Play VCR	SHIFT + SLOW ▶	Shift + Play /
■	Stop VCR	SHIFT + HOLD ■	Shift + Stop /
●	Rec VCR	SHIFT + REC MODE ●	Shift + Rec / Rec Mode
▶▶	>> VCR	SHIFT + TUNE+ ▶▶	Shift + >> /
◀◀	<< VCR	SHIFT + TUNE- ◀◀	Shift + << /

Original	Sustituto





Original	Sustituto	Original	Sustituto
	<>		Play / Slow
	>>		>> / Tune+
	<<		<< / Tune-
	Stop		Stop / Hold
	Rec		Rec / Rec Mode

