 
 







Original	Sustituto
 Standby / On	 Power
 Function	 List
 Open / Close	 Eject
 Home Media	 Media
 Karaoke	 Guide
 Mic Vol+	 Ch +
 Mic Vol-	 Ch -
 Resolution	 Format
 Net Contents	 Shift + Media
 Key Lock	 Pre Ch
 Dimmer	 Shift + Mute
 Sleep	 Sleep
 Exit	 Exit
 Virtual 3D Sound	 3D
 Sound	 Dual
 Sound Retriever	 Shift + Dual
 CD/SACD	 AV

Original	Sustituto
 USB Rec	 Rec
 Display	 Info
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Top Menu	 D. Menu
 Menu / PopUp	 Menu
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Home Menu	 Smart
 Return	 Back
 Tools	 Options
 Continued	 Shift + Play
 Skip Search	 Shift + Right





Original	Sustituto
REV	<<
Play	Play
FWD	>>
I<< / < / <	I<<
Pause	Pause
Stop	Stop
>> / > / >	>>
Audio	TV/R
Subtitle	Subt
Angle	Shift + Format
Repeat	Text
A-B	Shift + Text
1	1
2	2
3	3
4	4
5	5

Original	Sustituto
6	6
7	7
8	8
9	9
0	0
Clear	Shift + Exit
Program / Red	Red
Program / Red	Shift + Sleep
RDS / Bookmark / Green	Green
PTY / Zoom / Yellow	Yellow
PTY / Zoom /	Shift + Eject
Index / Blue	Blue

