




 



 











 





 


 
 



 



 

 

 

 



 


 
 







 


 







Original	Sustituto	Original	Sustituto
 Power Receiver	 Power	 7	 7
 RF ATT	 Exit	 8	 8
 DISP	 Info	 9	 9
 Station-	 I<<	 0	 0
 Station+	 >>I	 Function	 Smart
 D.Access	 Back	 CH: Select	 Yellow
 FQ-	 <<	 DSP Mode	 Blue
 FQ+	 >>	 Surround	 Dual
 Dolby Digital	 Green	 Setup / MPX	 Options
 Muting	 Mute	 Test Tone	 Text
 Menu / Class	 Menu	 Down	 Down
 1	 1	 Up	 Up
 2	 2	 Left / RF ATT	 Left
 3	 3	 Right / Disp	 Right
 4	 4	 Enter	 Ok
 5	 5	 Master	 Vol +
 6	 6	 Master Volume-	 Vol -





Original	Sustituto	Original	Sustituto
 Level+	 Ch +		
 Level-	 Ch -		
 FL. Dimmer	 Red		
 Source DVD	 Shift + 1		
 Source CD	 Shift + 2		
 Source TUNER	 Shift + 3		
 Source TV	 Shift + 4		
 Source TAPE	 Shift + 5		
 Source CD-R	 Shift + 7		

