


**Original**

	Power		Power
	AUDIO		Red
	CD		Green
	AUX		Yellow
	TV		Blue
	VCR	+	Shift + Red
	DVD	+	Shift + Green
	CABLE	+	Shift + Yellow
	SAT	+	Shift + Blue
	CH Sel		TV/R
	CH/Level Up		Ch +
	CH/Level Down		Ch -
	SPK SET		Exit
	PLII PARA.		D. Menu
	Adjust -	+	Shift + Down
	Adjust +	+	Shift + Up
	Mute		Mute

**Sustituto**

	Vol+		Vol +
	Vol-		Vol -
	Auto		Subt
	DSP -	+	Shift + Left
	DSP +	+	Shift + Right
	Stereo		Dual
	Setup / OSD		Options
	Menu / T.Tone		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Display / Sleep		Info
	Display / Sleep		Sleep
	Return /		Back
	Stop / P.Scan		Stop

**Sustituto**




Original

	<< / Tune -		<<
	>> / Tune +		>>
	I<< / Preset -		I<<
	>>I / Preset +		>>I
	7CH Dir		3D
	1 / Tuner		1
	2 / CD		2
	3 / AUX		3
	4 / Tape		4
	5		5
	6 / Video 1		6
	7 / Video 2		7
	8 / Video 3		8
	9		9
	0		0
	AUX Power /	+	Shift + Power
	AUX Rec	+	Shift + Rec

Sustituto

Original

	AUX Pause	+	Shift + Pause
	AUX Play	+	Shift + Play
	AUX Stop	+	Shift + Stop
	AUX <<	+	Shift + <<
	AUX >>	+	Shift + >>
	AUX >>I	+	Shift + >>I
	AUX I<<	+	Shift + I<<

Sustituto




**Original**

	AUDIO		Red
	CD		Green
	AUX		Yellow
	TV		Blue
	VCR	+	Shift + Red
	DVD	+	Shift + Green
	CABLE	+	Shift + Yellow
	SAT	+	Shift + Blue
	TV Power		Power
	TV CH +		Ch +
	TV CH -		Ch -
	TV CH Sel.		Media
	TV Mute		Mute
	TV Volume +		Vol +
	TV Volume -		Vol -
	TV 1		1
	TV 2		2

**Sustituto**
**Original**

	TV 3		3
	TV 4		4
	TV 5		5
	TV 6		6
	TV 7		7
	TV 8		8
	TV 9		9
	TV 0		0
	CABLE Power	+	Shift + Power
	CABLE CH/Level +	+	Shift + Ch +
	CABLE CH/Level -	+	Shift + Ch -
	CABLE CH Sel.	+	Shift + Smart
	CABLE Mute	+	Shift + Mute
	CABLE Volume	+	Shift + Vol +
	CABLE Volume -	+	Shift + Vol -
	CABLE 1	+	Shift + 1
	CABLE 2	+	Shift + 2

**Sustituto**



**Original**

AUX	CABLE 3	<b>SHIFT</b> + <b>3</b>	Shift + 3
TAPE	CABLE 4	<b>SHIFT</b> + <b>4</b>	Shift + 4
	CABLE 5	<b>SHIFT</b> + <b>5</b>	Shift + 5
	CABLE 6	<b>SHIFT</b> + <b>6</b>	Shift + 6
	CABLE 7	<b>SHIFT</b> + <b>7</b>	Shift + 7
	CABLE 8	<b>SHIFT</b> + <b>8</b>	Shift + 8
	CABLE 9	<b>SHIFT</b> + <b>9</b>	Shift + 9
	CABLE 0	<b>SHIFT</b> + <b>0</b>	Shift + 0

**Sustituto**
**Original**


**Sustituto**



**Original**

	AUDIO		Red
	CD		Green
	AUX		Yellow
	TV		Blue
	VCR	+	Shift + Red
	DVD	+	Shift + Green
	SAT	+	Shift + Blue
	CABLE	+	Shift + Yellow
	DVD Power		Power
	DVD Menu		Menu
	DVD Audio Sel.		Dual
	DVD Subtitle		Subt
	DVD Zoom		3D
	DVD OSD /		Format
	DVD Up		Up
	DVD Left		Left
	DVD Enter		Ok

**Sustituto**

	DVD Right		Right
	DVD Down		Down
	DVD Display		Info
	DVD Pause		Pause
	DVD Play		Play
	DVD Stop		Stop
	DVD <<		<<
	DVD >>		>>
	DVD I<<		I<<
	DVD >>I		>>I
	DVD 1		1
	DVD 2		2
	DVD 3		3
	DVD 4		4
	DVD 5		5
	DVD 6		6
	DVD 7		7

**Sustituto**




Original

	DVD 8		8
	DVD 9		9
	DVD 0		0
	SAT Power	+	Shift + Power
	SAT CH +	+	Shift + Ch +
	SAT CH -	+	Shift + Ch -
	SAT CH Sel.	+	Shift + Media
	SAT Mute	+	Shift + Mute
	SAT Volume +	+	Shift + Vol +
	SAT Volume -	+	Shift + Vol -
	SAT 1	+	Shift + 1
	SAT 2	+	Shift + 2
	SAT 3	+	Shift + 3
	SAT 4	+	Shift + 4
	SAT 5	+	Shift + 5
	SAT 6	+	Shift + 6
	SAT 7	+	Shift + 7

Sustituto

Original

	SAT 8	+	Shift + 8
	SAT 9	+	Shift + 9
	SAT 0	+	Shift + 0

Sustituto




**Original**

	AUDIO		Red
	CD		Green
	AUX		Yellow
	TV		Blue
	VCR	+	Shift + Red
	SAT	+	Shift + Blue
	CABLE	+	Shift + Yellow
	DVD	+	Shift + Green
	CD Pause		Pause
	CD Play		Play
	CD Stop		Stop
	CD I<<		I<<
	CD >>I		>>I
	CD 1		1
	CD 2		2
	CD 3		3
	CD 4		4

**Sustituto**

	CD 5		5
	CD 6		6
	CD 7		7
	CD 8		8
	CD 9		9
	CD 0		0
	VCR Power	+	Shift + Power
	VCR CH Sel.	+	Shift + Media
	VCR Rec	+	Shift + Rec
	VCR Play	+	Shift + Play
	VCR Mute	+	Shift + Mute
	VCR >>	+	Shift + >>
	VCR <<	+	Shift + <<
	VCR Volume -	+	Shift + Vol -
	VCR Volume +	+	Shift + Vol +
	VCR CH+	+	Shift + Ch +
	VCR CH-	+	Shift + Ch -

**Sustituto**




Original	Sustituto	Original	Sustituto
VCR Pause	 + 	Shift + Pause	
VCR Stop	 + 	Shift + Stop	
VCR 1	 + 	Shift + 1	
VCR 2	 + 	Shift + 2	
VCR 3	 + 	Shift + 3	
VCR 4	 + 	Shift + 4	
VCR 5	 + 	Shift + 5	
VCR 6	 + 	Shift + 6	
VCR 7	 + 	Shift + 7	
VCR 8	 + 	Shift + 8	
VCR 9	 + 	Shift + 9	
VCR 0	 + 	Shift + 0	

