


 


 
 
 
 
 

 

 


 
 


 
 


 



 








Original	Sustituto
 Power Receiver	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 Option	 Options
 Volume +	 Vol +
 Volume -	 Vol -
 Tuning +	 Ch +






 
 

 
 
 

 

 

 
 

 





 

 






Original	Sustituto
 Tuning -	 Ch -
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Return / Repeat	 Back
 Info	 Info
 Phono	 Shift + 1
 Tape	 Shift + 2
 CD	 Shift + 3
 Line 1	 Shift + 4
 Line 2	 Shift + 5
 Line 3	 Shift + 6
 Dock	 Shift + 7
 Tuner	 Shift + 8
 TP	 Shift + 9









Original	Sustituto
 Power Source	 Power
 Display	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 Enter	 Ok
 Play	 Play
 Pause	 Pause
 Stop	 Stop

Original	Sustituto
 Disc Skip	 Blue
 >>	 >>
 <<	 <<
 >>	 >>
  <<	  <<
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

