

















 









 







 




















 


Original	Sustituto
On/Off	 Power
3.*	 +  3 Shift + 3
Store	 Setup / OPT /
Reveal	 Play / Slow
On/Off	 +  Shift + Power
Tune+	 >> / Tune+
Tune-	 << / Tune-
4	 4 4
5	 5 5
6	 6 6
7	 7 7
8	 8 8
9	 9 9
Guide -/-- 1.	 Guide / EPG / -/--
0/10	 0 0
2.Fav P/C 2.	 Fav / Marker / PC
Red	 Red / Netflix / Search

Original	Sustituto
Green	 Green / APP / Repeat
Yellow	 Yellow / YouTube / Repeat
Blue	 Blue / Prime Video / Random
Tone-	 I<< / Preset-
Tone+	 >>I / Preset+
3	 3 3
Audio+	 +  Shift + Vol+
Search	 +  Shift + Red / Netflix /
4.# 16:9	 Picture / Format
Surround	 Eject / Surround
Nicam/Mono	 +  Shift + Audio / Lang I/II
Level L	 +  Shift + Left
Level R/Woofer	 +  Shift + Right
Display	 Display / Media
Mute	 Mute / Dimmer
Txt Stop	 Stop / Hold
Info	 Info / Angle



Original	Sustituto
Subt.List	 Subtitle / EQ
Sleep Timer	 Sleep / Timer
Return TV	 TV/Radio /
Menu video	 D.Menu / Top
Text	 Text / Goto
Txt Expand	 Zoom / Size
TV/AV	 AV / Input / RDS
Menu	 Menu / Home
Menu Up	 Up
Menu Left	 Left
OK Enter	 OK
Menu Right	 Right
Menu Off	 Exit / Cancel / Clear
Menu Down	 Down
Back	 Back / Return
Volume+	 Vol+
Chan.Up	 CH+ / Page+

Original	Sustituto
Volume-	 Vol-
Menu audio	 Audio / Lang I/II
Chan.Down	 CH- / Page-
1	 1
2	 2

