

 
 

 








 



 



 







 














 



 



 


 



 
 

 
 







| Original | | Sustituto | | Original | | Sustituto | |
|---|----------|--|------------|---|------------|---|---------|
|  | Standby |  | Power |  | Subtitle |  | Subt |
|  | OSD |  | Media |  | Title |  | Info |
|  | DVD/FM |  | Smart |  | Menu |  | Menu |
|  | 1 |  | 1 |  | Setup |  | Options |
|  | 2 |  | 2 |  | Up |  | Up |
|  | 3 |  | 3 |  | Down |  | Down |
|  | 4 |  | 4 |  | Right |  | Right |
|  | 5 |  | 5 |  | Left |  | Left |
|  | 6 |  | 6 |  | Enter |  | Ok |
|  | 7 |  | 7 |  | CH+ |  | Ch + |
|  | 8 |  | 8 |  | CH- |  | Ch - |
|  | 9 |  | 9 |  | >>I |  | >>I |
|  | 0 |  | 0 |  | I<< |  | I<< |
|  | 10+ |  | Guide |  | >>/Search+ |  | >> |
|  | Time |  | Shift + AV |  | <</Search- |  | << |
|  | Language |  | Dual |  | Play/Pause |  | Play |
|  | Angle |  | TV/R |  | Stop |  | Stop |





| Original | | Sustituto | | Original | Sustituto |
|----------------|----------------|--------------------------|-----------------|----------|-----------|
| VOL+ | Vol+ | + VOL | Vol + | | |
| VOL- | Vol- | - VOL | Vol - | | |
| MUTE | Mute | MUTE | Mute | | |
| ZOOM | Zoom | ZOOM ▲ | Eject | | |
| USB/CARD | USB/Card | TIMER AV | AV | | |
| SLOW | Slow | B | Green | | |
| PROG | Prog | PROG SLEEP | Sleep | | |
| PBC | PBC | A | Red | | |
| RETURN | Return | RETURN BACK | Back | | |
| CD RIPPING | CD Ripping | D | Blue | | |
| SPEAKER ON/OFF | Speaker On/Off | PICTURE FORMAT | Format | | |
| A-B | A-B | FAV PRE-CH | Pre Ch | | |
| REPEAT | Repeat | REPEAT TEXT | Text | | |
| MO/ST | MO/ST | SHIFT + SOUND DUAL | Shift + Dual | | |
| MEMORY | Memory | REC MODE | Rec | | |
| CLEAR | Clear | CLEAR EXIT | Exit | | |
| AUTO SCAN | Auto Scan | E-MANUAL D.MENU | D. Menu | | |

