


Original	Sustituto	Original	Sustituto
VHS/DVD Power	Power	Create Chapter	TV/R
Direct TV Rec	Subt	I<< Skip	I<<
VHS/DVD	Smart	Skip >>I	>>I
1	1	REW / << Slow/Search	<<
2	2	FF / Slow/Search	>>
3	3	Stop	Stop
4	4	Pause	Pause
5	5	Play	Play
6	6	Direct Navigator / Top Menu	D. Menu
7	7	Functions	List
8	8	Up	Up
9	9	Left	Left
0	0	Enter	Ok
Cancel / Reset	Exit	Right	Right
Input Select	Guide	Down	Down
CH+ / Tracking/V-Lock+	Ch +	Sub Menu	Menu
CH- / Tracking/V-Lock-	Ch -	Return	Back

Original	Sustituto	Original	Sustituto
Create Chapter	TV/R	I<< Skip	I<<
Skip >>I	>>I	REW / << Slow/Search	<<
FF / Slow/Search	>>	Stop	Stop
Pause	Pause	Play	Play
Direct Navigator / Top Menu	D. Menu	Functions	List
Up	Up	Left	Left
Enter	Ok	Right	Right
Down	Down	Sub Menu	Menu
Return	Back		







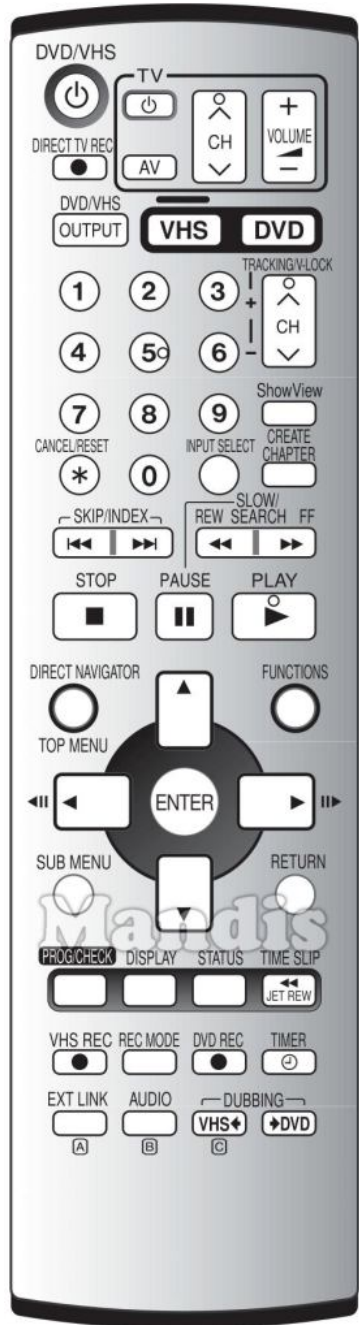

Original	Sustituto	Original	Sustituto
VHS/DVD Power	Power	ShowView	Media
Direct TV Rec	Subt	I<< Index	I<<
VHS/DVD	Smart	Index >>I	>>I
1	1	REW	<<<
2	2	FF	>>>
3	3	Stop	Stop
4	4	Pause	Pause
5	5	Play	Play
6	6	Up	Up
7	7	Left	Left
8	8	Enter	Ok
9	9	Right	Right
0	0	Down	Down
Cancel / Reset	Exit	Return	Back
Input Select	AV	Prog/Check	Sleep
CH+ / Tracking/V-Lock+	Ch +	Display	Info
CH- / Tracking/V-Lock-	Ch -	Jet Rew	Shift + <<<

Original	Sustituto	Original	Sustituto
VHS/DVD Power	Power	ShowView	Media
Direct TV Rec	Subt	I<< Index	I<<
VHS/DVD	Smart	Index >>I	>>I
1	1	REW	<<<
2	2	FF	>>>
3	3	Stop	Stop
4	4	Pause	Pause
5	5	Play	Play
6	6	Up	Up
7	7	Left	Left
8	8	Enter	Ok
9	9	Right	Right
0	0	Down	Down
Cancel / Reset	Exit	Return	Back
Input Select	AV	Prog/Check	Sleep
CH+ / Tracking/V-Lock+	Ch +	Display	Info
CH- / Tracking/V-Lock-	Ch -	Jet Rew	Shift + <<<



