
 

 

 




Original	Sustituto
	Power
	Mute
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	<< / Tune-
	>> / Tune+
	I<< / Preset-
	>>I / Preset+
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	[≡i] Display / Media
	Text
	Subtitle
	Freeze

Original	Sustituto
	Info
	Menu
	Source
	EPG
	Exit
	Up
	Down
	Right
	Left
	OK
	Vol+
	Vol-
	FAV
	Rec
	CH+
	CH-
	1





Original		Sustituto		Original		Sustituto	
2	2	DVD 2	2				
3	3	CD - STB 3	3				
4	4	VIDEO 4	4				
5	5	TAPE 5	5				
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
0	0	HDMI - BAT 0	0				
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II				
RECALL	Recall	RETURN BACK	Back / Return				

