






 

 

 

 

 
 
 





 





Original	Sustituto
 Audio	 Audio / Lang I/II
 []	 Picture / Format
 Power	 Power
 PIP	 Zoom / Size
 V=	 D.Menu / Top
 [≡]	 Guide / EPG / -/--
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Sustituto
 Pause/T	 Pause / Step / Freeze
 Menu / Home	 Menu / Home
 Exit / Cancel / Clear	 Exit / Cancel / Clear
 Info / Angle	 Info / Angle
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Red / Netflix / Search	 Red / Netflix / Search
 Blue / Prime Video / Random	 Blue / Prime Video / Random
 Green / APP / Repeat	 Green / APP / Repeat
 Yellow / YouTube / Repeat	 Yellow / YouTube / Repeat










 



 





 

 



 











Original	Sustituto
 Audio	 Audio / Lang I/II
 []	 Picture / Format
 Power	 Power
 SV/[*]	 Zoom / Size
 LP/V=	 Setup / OPT /
 000/[≡I]	 Guide / EPG / -/--
 Timer/Mute	 Sleep / Timer
 Timer/Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Sustituto
 0	 0
 Pause/T	 Pause / Step / Freeze
 M	 Menu / Home
 E	 Exit / Cancel / Clear
 Rec/i	 Info / Angle
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 <<	 << / Tune-
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Play	 Play / Slow





Original	Sustituto
 Audio	 Audio / Lang I/II
 []	 Picture / Format
 Power	 Power
 SV	 Display / Media
 LP	 Smart / List
 Timer	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 000	 0
 M	 Menu / Home

Original	Sustituto
 E	 Exit / Cancel / Clear
 Rec	 Rec / Rec Mode
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 <<	 << / Tune-
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Play	 Play / Slow

