










| Original   | Sustituto   |
|--|---|
|  Power            |  Power                       |
|  Mute             |  Mute / Dimmer               |
|  Red / Find       |  Red / Netflix / Search      |
|  Green / V-Format |  Picture / Format            |
|  Green / V-Format |  Green / APP / Repeat        |
|  Yellow / TXT     |  Text / Goto                 |
|  Yellow / TXT     |  Yellow / YouTube / Repeat   |
|  Blue / Audio     |  Audio / Lang I/II           |
|  Blue / Audio     |  Blue / Prime Video / Random |
|  Record           |  Rec / Rec Mode              |
|  Play            |  Play / Slow                |
|  Stop           |  Stop / Hold               |
|  Shift          |  Setup / OPT /             |
|  << Fast        |  << / Tune-                |
|  Fast >>        |  >> / Tune+                |
|  < Slow         |  I<< / Preset-             |
|  Slow >         |  >>I / Preset+             |

| Original   | Sustituto   |
|--|---|
|  Sleep          |  Sleep / Timer         |
|  Zoom           |  Zoom / Size           |
|  F1             |  Shift + 1             |
|  F2             |  Shift + 2             |
|  Menu           |  Menu / Home           |
|  Up / PR+       |  Up                    |
|  Up / PR+       |  CH+ / Page+           |
|  Exit           |  Exit / Cancel / Clear |
|  Left / Vol-    |  Left                  |
|  Left / Vol-    |  Vol-                  |
|  OK / List     |  OK                   |
|  OK / List    |  Smart / List        |
|  Right / Vol+ |  Vol+                |
|  Right / Vol+ |  Right               |
|  EPG          |  Guide / EPG / -/--  |
|  Down / PR-   |  Down                |
|  Down / PR-   |  CH- / Page-         |



