



Original	Sustituto
On	Power
Off	+ Shift + Power
Mute	Mute / Dimmer
AVR	+ Shift + Smart / List
DVD	+ Shift + 2
VID1	+ Shift + 1
HDMI1	+ Shift + Guide / EPG / -/-
AM/FM	+ Shift + 6
CD	+ Shift + 3
VID2	+ Shift + 4
HDMI2	+ Shift + 0
AUX	+ Shift + 7
Tape	+ Shift + 5
VID3	+ Shift + 8
HDMI3	+ Shift + Fav / Marker / PC
Sleep	Sleep / Timer
6CH	+ Shift + 9

Original	Sustituto
Vol+	Vol+
Surr.	Eject / Surround
Test	Text / Goto
Vol-	Vol-
CH.	Guide / EPG / -/-
Up	Up
SPKR	Menu / Home
Left	Left
OK	OK
Right	Right
Digital	Picture / Format
Down	Down
Delay	Fav / Marker / PC
1	1
2	2
3	3
4	4





 

Original	Sustituto

Original	Sustituto





Original	Sustituto
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Disc Menu	 D.Menu / Top
 Setup	 Setup / OPT /
 Menu	 Menu / Home
 Status	 Display / Media
 Random	 Blue / Prime Video / Random
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 Playlist	 Smart / List
 I<</Skip Down	 I<< / Preset-
 Skip Up/>>I	 >>I / Preset+
 << DVD	 << / Tune-
 > DVD	 Play / Slow
 >> DVD	 >> / Tune+
 Open / Close	 Eject / Surround
 Stop DVD	 Stop / Hold

Original	Sustituto
 Pause DVD	 Pause / Step / Freeze

