





 







 



 

 

 

 

 



 



 



 



 



 



 













 







Original		Sustituto		Original		Sustituto	
	Power		Power		Vol-		Vol-
	Micro		Smart / List		Mute		Mute / Dimmer
	Up		Up		▼		CH- / Page-
	Left		Left		1		1
	OK		OK		2		2
	Right		Right		3		3
	Down		Down		4		4
	Back		Back / Return		5		5
	Home		Menu / Home		6		6
	≡		Setup / OPT /		7		7
	<<		<< / Tune-		8		8
	Play		Play / Slow		9		9
	Pause		Pause / Step / Freeze		Subt		Subtitle / EQ
	>>		>> / Tune+		0		0
	Vol+		Vol+		TXT		Text / Goto
	Guide		Guide / EPG / -/-		prime video		Shift + Blue / Prime
	▲		CH+ / Page+		Netflix		Shift + Red / Netflix / Search





	Original	Sustituto		Original	Sustituto
	DAZN	Media Display / Media			
	Tv NOW	PROGRAM TV/RADIO / TV/Radio /			
	Red	NETFLIX SEARCH Red / Netflix / Search			
	Green	APP REPEAT Green / APP / Repeat			
	Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat			
	Blue	Prime Video RANDOM Blue / Prime Video / Random			

