






 

 
 
 
 
 



 
 




Original	Sustituto
 Power Receiver	 Power
 Power Source	 Shift + Power
 Tuner	 Red
 USB	 Green
 Net	 Yellow
 Phono	 Blue
 Party	 Smart
 HDMI Out	 Media
 Program Up	 Ch +
 Program Down	 Ch -
 Volume+	 Vol +
 Volume-	 Vol -
 Mute	 Mute
 Pop-Up Menu	 Menu
 Top Menu	 Shift + Menu
 Option	 Options
 Display	 Shift + Info

Original	Sustituto
 Return	 Back
 On Screen	 Eject
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Play/Band	 Play
 Pause	 Pause
 Stop	 Stop
 Mode	 3D
 Tuning >>	 >>
 << Tuning	 <<
 Preset >>	 >>
 << Preset	 <<
 Movie	 Subt
 Music	 Dual





Original	Sustituto
 Sur. Decode	 TV/R
 Straight	 AV
 Sleep	 Sleep
 Info	 Info
 Enhancer	 Format
 Pure Direct	 List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10/Memory	 Guide

Original	Sustituto
 ENT.	 Pre Ch
 HDMI 1	 Shift + 1
 HDMI 2	 Shift + 2
 HDMI 3	 Shift + 3
 HDMI 4	 Shift + 4
 HDMI 5	 Shift + 5
 HDMI 6	 Shift + 6
 HDMI 7	 Shift + 7
 V-AUX	 Shift + 8
 AV 1	 Shift + 9
 AV 2	 Shift + Guide
 AV 3	 Shift + 0
 AV 4	 Shift + Pre Ch
 AV 5	 Shift + Smart
 AV 6	 Shift + Media
 Audio 1	 Shift + Right
 Audio 2	 Shift + Left







 



 






 



 
 
 


 







Original	Sustituto	Original	Sustituto
 BD DVD Scene	 +  A Shift + Red		
 TV Scene	 +  B Shift + Green		
 NET Scene	 +  C Shift + Yellow		
 Radio Scene	 +  D Shift + Blue		




 
 
 
 






Original	Sustituto
 Power Receiver	 Power
 Power Source	 Shift + Power
 Party	 Smart
 HDMI Out	 Media
 Mute	 Mute
 Volume+	 Vol +
 Volume-	 Vol -
 Pop-Up Menu	 Menu
 Top Menu	 Shift + Menu
 Option	 Options
 Display	 Shift + Info
 Return	 Back
 On Screen	 Eject
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left

Original	Sustituto
 Enter	 Ok
 Play/Band	 Play
 Pause	 Pause
 Stop	 Stop
 Mode	 3D
 Tuning >>	 >>
 << Tuning	 <<
 Preset >>	 >>
 << Preset	 <<
 Info	 Info
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original	Sustituto
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	

Original	Sustituto
	
	
	
	
	
	
	
	
	
	
	
	
	

