






 









 





 








 






 

 










 
 

 

 

 

 

 








Original	Sustituto	Original	Sustituto
	Power		Power
	FL Display		Smart
	TUNER BAND		Green
	AUX		Red
	Top Menu		D. Menu
	Menu		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Display		Info
	Return		Back
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Stop		Stop
	Pause		Pause
	Play		Play
	Disc Skip		Sleep
	SFC		Eject
	CH-		Ch -
	CH+		Ch +
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Subwoofer		Shift + 4
	Action		Options
	Subtitle		Subt
	Audio		Dual
	Angle		Format
	Marker		3D
	CH Select		Shift + Media





Original	Sustituto
TEST	Test
MIX 2ch	Mix 2CH
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
>10 / Enter	Guide
Disc	Pre Ch
Seat Position	Shift + 1
Center Focus	TV/R
Super Surround	Shift + 3

Original	Sustituto
PRO LOGIC	Shift + 5
Disc Manager	List
Play Mode	Shift + Play
Cancel	Exit
Repeat	Text
A-B Repeat	Shift + Text
Cinema	Media
Timer	AV







