
 














 







Original	Sustituto
 Power	 Power
 Sleep	 Sleep
 CBL/SAT	 1
 DVD	 2
 Blu-ray	 3
 Game	 4
 AUX	 5
 iPod/USB	 6
 Tv Audio	 7
 FM	 8
 Network	 9
 Internet Radio	 TV/R
 Channel+	 Ch +
 Channel-	 Ch -
 Page Up	 Subt
 Page Down	 Dual
 Green/Movie	 Green

Original	Sustituto
 Red/Music	 Red
 Blue/Game	 Blue
 Yellow/Pure	 Yellow
 Info	 Info
 Option	 Options
 Back	 Back
 Setup	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Volume+	 Vol +
 Volume-	 Vol -
 Mute	 Mute
 Favorite Station 1	 Text
 Favorite Station 2	 AV





	Original	Sustituto	Original	Sustituto
	Favorite Station 3	 Format		
	I<</Tune-	 I<<		
	Tune+ / >> I	 >> I		
	Play	 Play		
	Pause	 Pause		

