


 
 
 

 

 





 




 








Original	Sustituto
	Power
	Tv/Text
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	AV/Input Select
	-/--
	Tracking/V-Lock+
	Tracking/V-Lock-
	Vol+

Original	Sustituto
	Vol-
	Search
	Show View
	OSD/Display
	Replay
	Direct Tv Rec
	I<< Index
	Index >>I
	Rec
	Pause/Step
	Menu
	OK
	Play/Up
	Stop/Down
	>>/Right
	<</Left
	SP/LP





Original		Sustituto		Original		Sustituto	
	Timer Rec		3D		Exit		Exit
	Prog/Check		Sleep				
	Reset		Back				
	Audio		Dual				
	VPS/PDC		Subt				
	AV Link		Media				
	TV Aspect		Eject				
	Still Album		List				
	Up		Up				
	Down		Down				
	Date+		Right				
	Date-		Left				
	On+		Red				
	On-		Green				
	Off+		Yellow				
	Off-		Blue				
	Cancel		D. Menu				





Original	Sustituto		
	Power		Power
	TV/Text		Text
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide

Original	Sustituto		
	AV Input Select		AV
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

